

# MicroConverter™ Technical Note - uCOO2 Writing an ADuC812 Application in C

### INTRODUCTION

This Application Note describes the use of the Keil toolsuite (Keil C51 uVision compiler and Dscope C-Source Simulator) in creating a 'C' application for the ADuC812.

A 2K code limited version of the Keil compiler is included as part of the ADuC812 QuickStart<sup>TM</sup> Development System from Analog Device, more information on the ADuC812 QuickStart<sup>TM</sup> Development System and the Keil compiler is available on the Analog Devices MicroConverter web site at www.analog.com/microconverter.

The Keil software development kit has 2 main components namely :

uVision : A windows front end to the 8051 C-Compiler.

dScope : A windows front end to the Keil C-Simulator.

Further information on the range of Keil software deveopment products can be found at www.keil.com.

This application note describes the configuration and simulation of an ADuC812 application written in C and developed in Keil tool's environment. This note assumes you have already installed the Keil toolsuite on your PC and that you have also access to two additional ADuC812 specific header files (ADuC812.inc and ADuC812.h) which are included in the QuickStart<sup>TM</sup> Development System or available on the Analog Devices web site.

This C-code development example is covered in the following steps :

- Compiling the C-Source Code
  - Configuring uVision-51 for the ADuC812
  - Creating a project
  - Compiling your code
- Simulating the C-Source Code
  - Configuring dScope
  - Customizing the GUI
  - Code Execution
- Conclusions

Information furnished by Analog Devices is believed to be accurate and reliable. However, no responsibility is assumed by Analog Devices for its use, nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of Analog Devices.

 <sup>™</sup> MicroConverter is a Trademark of Analog Devices, Inc.
 ™ QuickStart is a Trademark of Analog Devices, Inc.
 ™ Keil C51 and Dscope are Trademark of Keil Elektronik GmbH.
 One Technology Way, P.O. Box 9106, Norwood. MA 02062-9106, U.S.A.
 Tel: 617/329-4700
 Fax: 617/326-8703

# CONFIGURING uVISION-51

Before creating a C-file you first need to configure the uVision-51 tool for the ADuC812. When uVision-51 is launched, the main window appears on the screen as shown in figure 1 below. This is the main work window for your compilation session. To configure the compile session to generate an ADuC812 compatible Intel hex output file you should work through the following steps.

🐺 µVision/51 evaluation			_ & ×
<u>File Edit Project Run Options</u>	<u>Iools Window Help</u>	 	
		NU	M

Figure 1. uVision-51 Main window

#### <u>STEP 1 :</u>

In the main window, choose the Options menu and select the A51 Assembler. From the 'Object' tab select the options exactly as shown in figure 2.

A51 Assembler Options	×
Listing Object Misc ✓ Include debug information □ Exclude line numbers ✓ Define 8051 SFRs Register banks used □ □ □ 1 □ 2 □ 3 Macro processor ○ Disabled ○ Standard ○ MPI	OK Cancel <u>H</u> elp <u>D</u> efault
Command Line Options String DB	×

Figure 2. A51 Assembler Options

#### <u>STEP 2 :</u>

Again from the Options, select C51 compiler and in the 'Object' tab select the options exactly as shown in figure 3 below.

C51 Compiler Options	×
Listing Object Optimization Memory Model          Keep variables in order         Include debug information         Include extended debug information         Enable ANSI integer promotion rules         Generate Registerbank Independent Code         Interrupt Vectors         Include in object       Interval:         B       Offset:	Chip Misc OK Cancel <u>H</u> elp <u>D</u> efault
Command Line Options String	
CD SB DB OE	

Figure 3. C51 Compiler Options

#### <u>STEP 3 :</u>

From the Options menu, select PL/M-51 Compiler .From the 'Object ' tab select the options exactly as shown in figure 4 below.

PL/M-51 Compiler Options	×
Listing Object Misc	
✓ Include debug information	ОК
Include interrupt vectors	Cancel
<u>C</u> ode	<u>H</u> elp
Compact: 2K Functions, 64K Program 💌	
Optimization Level	
Level 2	
Command Line Options String	
DB	

Figure 4. PL/M-51 Compiler Options

#### <u>STEP 4 :</u>

From the Options menu, select BL 51 Code banking linker. From the 'Linking' tab select the options exactly as shown in figure 5 below.

BL51 Code Banking Linker		×
Listing Linking Size/Loca Debug Information Include local symbols Include gublic symbols Include line numbers	ntion Additional Seg Target Options Code <u>b</u> anking RT <u>X</u> 51 RTX51 <u>t</u> iny	ments Files OK Cancel <u>H</u> elp <u>D</u> efault
Comman	d Line Options String	
NOOL RS(128) PL(68) PW(78)		4

Figure 5. BL51 Code banking linker

#### <u>STEP 5 :</u>

From the Options menu, select Make. From 'Compile ' tab select the options as shown in figure 6 below.

Make Options	×
After Compile After Make Misc Extensions	
After Compile © <u>S</u> top © <u>Run BL51 Banked Linker</u> © Run <u>L</u> IB51 Librarian	OK Cancel <u>H</u> elp
✓ Run OC51 Object <u>Converter</u> ✓ Run <u>O</u> H51 Object Hex Converter	<u>D</u> efault

Figure 6. Make...

#### <u>STEP 6 :</u>

At this point, to finish the configuration of your uVision-51 you just have to add two libraries in the Keil directory path. Those libraries are specific to the ADuC812 and basically include memory map information detailing the additional SFR's used in the ADuC812.

These additional files are : ADuC812.inc ADuC812.h and are available as part of the QuickStart<sup>TM</sup> Development System or from the Analog Devices Web site at www.analog.com/microconverter.

The ADuC812.inc file contains all the Processors Declarations while the ADuC812.h file is the header file specific to the ADuC812.

Copy the ADuC812.inc in the Asm directory ( the path is *c:\ckeil\asm* ). Copy the ADuC812.h in the Bin directory ( the path is *c:\ckeil\bin* ).

# CREATING A PROJECT

Before writing any C-code, a project associated with our code needs to be created. This can be accomplished by creating a new folder in the Ckeil directory.

Create a folder named Pres in this path : c:\ckeil\examples\pres\.

You can now create a new project in uVision-51. From the main window, choose the Edit menu and select New project. A new window appears as shown in figure 7 below.

Select the folder that you've created previously ( pres ) and on the left side of the window type the name of your new project, eg. pres.prj and press OK.

Note: After you press OK, a new window appears, this can be ignored, press Cancel to remove.

Create New Project		? ×
File <u>n</u> ame:	<u>F</u> olders:	ОК
pres prj	c:\ckeil\examples\pres	Cancel
×	C: \ Ckeil Carl examples Carl pres	N <u>e</u> twork
List files of <u>type:</u> Project File (*.prj)	Dri <u>v</u> es:	

Figure 7. Create New project window

### CREATION OF THE C-FILE

Now it's time to write the C-file. In the main window, choose the File menu and select New. A new window named <untitled 1> appears on the screen as shown below on figure 8.



Figure 8. Create New project window

Type the following short C source code in this new window.

```
/* pres.C - this routine uses the external INT0 pin to trigger conversions on the ADC and DACs */
#pragma DEBUG OBJECTEXTEND CODE
                                             /* pragma lines can contain state C51
                                                                                       */
                                        /* prototype declarations for I/O functions */
#include <stdio.h>
#include <ADuC812.h>
                                       /* ADuC812 header file
                                                                     */
void interrupt_0 () interrupt 0
{
       ADCCON1 = 0x7C;
       ADCCON3 = 0x00;
       ADCCON2 = 0x10;
                               // single conversion
       printf ( "ADC Channel 0 is converting\n" );
       while (EA == 1)
        {
        j
}
void wait (void)
               // wait function
{
                  // only to delay for LED flashes
;
void main (void)
{
    int a;
       TCON ^{=} 0x01;
                             // setup for the interrupt 0 routine
       IE ^{=} 0x80;
       IE ^{=} 0x01;
                            // setup for the serial port
       SCON = 0x52;
       TMOD |= 0x20;
       TH1 = 0xFD;
       TR1 = 1;
       TI = 1;
       DAC0H = 0x00;
       DAC0L = 0x00;
       DACCON = 0xA9;
       while (1)
        {
               EA = 1;
               printf (" DAC0 updated with : %bX \n ",DAC0L) ;
               for (a = 0; a < 10000; a++) // Delay for 10000 Counts
                                  // call wait function
                       wait ();
               printf ("\n");
               DAC0L++;
       }
}
```

Once you've typed all the code, in the main window choose the file option and select Save. A new window appears as shown in figure 9.

Save your new file ( pres.c ) under the pres folder you've created previously.

Note: the extension .c is created automatically by uvision-51.

ave As		? >
File <u>n</u> ame: pres.c	Folders: c:\ckeil\examples\pres c:\ ckeil ckeil ckeil pres	OK Cancel N <u>e</u> twork
Save file as <u>type:</u> C Source (*.c)	Dri <u>v</u> es:	-

Figure 9. Save as window

Now before compiling the C-file, we need to include it in our project. From the main window, choose the Project option and select Edit Project. A new window appears as shown in figure 10 below. Click on the Add button, a new window appears. Select the pres.c file which is in our pres folder and click on Add. The result is the window like figure 10 below.

Project - C:\CKEIL\EXAMPLES\PRES\PRES.PRJ		×
Source Files		
PRES.C	<u>A</u> dd	<u>S</u> ave
	<u>R</u> emove	Cancel
	Move <u>U</u> p	<u>H</u> elp
	Move <u>D</u> own	
<u>O</u> pen O <u>p</u> en All		
Iranslator: C51 Compiler Command:		
□ Always <u>B</u> uild □ Inc <u>l</u> ude in Link/Lib □bject:		
Bank <u>n</u> umber: <u>F</u> atal error level	Error error level	Warning error level

Figure 10. Edit project window

The last step in the use of uVision-51 is the compilation step. In the main window, choose the menu Project and select the option Make:update project. The C51 compiler will compile the pres project. If everything goes well the window shown in figure 11 should appear on the screen otherwise it means that either there are mistakes in the c-file or that the configuration of the uVision is incorrect. At this time, all the files that you need ( pres.hex, pres.obj, pres.lst etc... ) have been created in your pres folder.

Project Status (PRES.PRJ)
Source File: PRES
Object File: PRES.HEX
Total Time: 00:00:02
Status: Make Successful HEX File Created
ΟΚ

Figure 11. Project status window

### SIMULATING THE C-SOURCE CODE

To create the simulation, we need to use the second tool from Keil, Dscope (figure 12). Before simulating the code that has just been compiled, we need to configure Dscope for the ADuC812 by working through the steps in the following pages.

🗊 dScop	е								-	. 8 ×
<u>F</u> ile ⊻iew	<u>S</u> etup	<u>H</u> elp								
				<i>a 6</i> R E		9 - C	?			
	_			226		1		Г	2 ma =	
Start	🕑 Ado	be PageN	4aker 6.5 - [C	🧐 Inbox - Micr	osoft Exchange	dScope		1	QEV 💁 5:	21 PM

# CONFIGURING DSCOPE

When you launch Dscope, it's possible that the window that you see is not exactly the same that in figure 12. Some small windows can appear inside the main window. To hide those windows use the button bar (figure 13) which is at the top of the main window. By clicking on each button, you'll make a related window appear or disappear.



Figure 13. Button bar

The first thing you have to do is to select the processor DLL. In the main window, on the top left corner, there is a scrolling bar. As shown in figure 14 select the 8052 DLL ( the core of the ADuC812 is an 8052 ).

🗐 dSc	ope				
<u>F</u> ile ⊻i	ew <u>S</u> etup	<u>H</u> elp			
ß		-			
	mon51.c	л. 🗖			
	8052 dll				
	8051.dll				

Figure 14. Selection of the DLL

After you've selected the DLL you must declare your object file which has been compiled previously under the C51 compiler. In the main window, choose the menu File and select Load object file. A new window appears as shown in figure 15. Select the file you've created previously ( ie pres ).

Select an absolute Object file		? ×
File <u>n</u> ame:	<u>F</u> olders:	OK
pres.	c:\ckeil\examples\pres	Cancel
	C. C	<u>H</u> elp
List files of type:	Dri <u>v</u> es:	- <u>Ne</u> twork
List files of type: OMF file (*. )	Drives:	]

Figure 15. Selection of the Absolute object file

# CREATION OF THE SIMULATION ENVIRONMENT

The following steps will allow you to create a generic simulation environment that you may want to customize to you own requirements. From the top tool bar, click on the buttons that are shown on figure 16 below.

	Module window
4	I/O window
E	Performance Analyzer



The windows shown in figure 17, 18 and 19 appear on the screen. Arrange them as required.

en Module:	PRES					_ 0	×
Co <u>m</u> mands	<u>G</u> o! GoTil <u>C</u> urs! Step <u>(</u>	<u>)</u> ut! <u>S</u> tepInto! Ste <u>p</u> Over!	Stop!				
hll	▼ ±+ + + + + + + + + + + + + + + + + + +	(P) H & Q					•
C:0000H	_ICE_DUMMY_:					Go	
C:0000H	LJMP	0x4E0					
C:0003H	LJMP	interrupt_0(0x434)				GoTilCurs	
C:0006H	MOV	A, 0x17				Charleta	
C:0008H	ADD	A,#0x0B				Stepinto	
C:000AH	MOV	RO,A				StepOver	
C:000BH	MOV	A, 4R0					
C:000CH	INC	0x17				StepOut	
C:000EH	RET	TO #0-00					
C:000FH	MUV	RU, #UXU8					
C:0011H	UNB	UX2U.7,UX16					
C:0014H		RU, HUXUB				View Trace	
C:0017H	MOM	A 0					
C:001AH	LCALL	202PLDTTDATA (0x3P3)				Assemble	
C:001DH	LIMP	2C2CLDPTR(0x35B)					
C:0020H	JB	0x20.0.0xE					
C:0023H	MOV	R7.#0x2E					
C:0025H	SETB	0x20.0					
C:0027H	SJMP	0x41					
C:0029H	MOV	A, R7					
C-00274	λΝΠ.	⊼ #በ⊽በ⊽					
				hll	stop		•
•				-		F	//





Figure 18. Serial I/O window



Figure 19. Performance Analyzer window

The next step is the setup of the Performance Analyzer. From the main window, choose the Setup menu and select Setup performance analyzer. In the new window, on the exp: line, type wait and then click on define range. Then on the exp: line, type interrupt\_0 and click on define range. Once complete, you can close the setup window by clicking on the Close button. You'll see that on the Performance analyzer window, things have changed (see figure 20). This analyzer gives you the percentage of time that is spend on each function of the code during its execution. The line unspecified is the main function. All you've done is to specify to the Performance Analyzer the functions you're using in your C-file. The use of the Performance Analyzer will be more obvious during the execution of the code later in the application.



Figure 20. Performance Analyzer after setup

The last window we need for the simulation is the window that controls interrupt generation. In our C-Source code example entered previously, an active INT0 will halt DAC execution and trigger an ADC channel#0 conversion. To configure interrupts, choose the menu peripheral in the main window and then select interrupt. A new window appears. Click on the last line of this window (P3.2/INT0#). The result should be like in figure 21 below.

Interrupt System 🔀										
Int Source	Vector	Mode	Req	Ena	Pri.					
Timer 2	2BH		0	0	0					
P1.1/T2EX	2BH		0	0	0					
Ser. Receive	23H		0	0	0					
Ser. Transmit	23H		0	0	0					
Timer 1	1BH		0	0	0					
P3.3/INT1#	13H	0	0	0	0					
Timer 0	OBH		0	0	0					
P3.2/INT0#	03H	0	0	0	0					
Selected Inte	errupt —									
	□ IE0	E E	X0	∏ PX	:0					
EA		C	lose							

Figure 21. Interrupt window

Rearrange the four windows (module. serial I/O, Performance Analyzer, Interrupt system) as shown overleaf.

## CODE EXECUTION

At this time the Dscope main window should look like figure 22.



Figure 22. New main Dscope window

The pres.c C-Source routine exercises the ADC conversion, the DAC conversion and the INT0 interrupt system. In the main function DAC0 is updated constantly with a linear ramp. If you generate a simulated INT0 interrupt, the code executed is the code contained in the interrupt\_0 function ; a conversion is triggered on ADC channel 0 and you're in a wait state until you release the interrupt to return in the main code.

To start the simulation, click on the GO button in the module window. The serial I/O window should be updated as shown in figure 23 below.



Figure 23. Serial window updated after GO

To generate an INT0 interrupt, click in the Interrupt system window on IE0. Once you've done that, the serial window is updated (figure 24) and the code is waiting for you to release the interrupt. To release the interrupt, in the Interrupt system window, click on EA. The code will go back in the main function and as a result, the serial window looks again like in figure 23.

🔀 Serial 170				Ŀ		×
DACO updated with	:	65				
DACO updated with	:	66				
DACO updated with	:	67				
DACO updated with	:	68				
DACO updated with	:	69				
DACO updated with	:	ADC	Channel	0	is	

Figure 24. Serial window updated after INTO

The Performance Analyzer allows the programmer to estimate the run time efficeny of code. Figures 25 and 26 describe code execution scenarios that could be analysed during this simulation.

In the first scenario (#1) shown in figure 25 below, the analyzer shows code execution during an active interrupt period. The conversion on ADC channel 0 has been generated and the code is waiting for the user to release the interrupt.

🕾 Performar	nce An	alyzer									_ [	X
<u>C</u> ommands												
	0%	10	20	30	40	50	60	70	80	90	100%	<b>A</b>
<unspecifie< td=""><td>d&gt;: ■</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></unspecifie<>	d>: ■											
w. interrupt	ait: n·											
interrupt_	_0.											
min time:	max tin	ne: av	zg time	:: tota   82.(	l time: 67662	% 2.3	CO	unt:				

Figure 25.Scenario #1: Performance Analyzer - Interrupt Activated

In this second scenario (#2) shown in figure 26 below, the analyzer shows code execution during the main function with calls to the wait function. The DAC0 is continuously updated and there is obviously no activity on the interrupt\_0 bar.

nce An	alyzer									_ [	X
0%	10	20	30	40	50	60	70	80	90	100%	1
d>:											
ait:											
_U:											
											_
max tin	ne: a	vg time	: tota	il time:		CO	unt:				
			3.3	10575	78.6						
		_	_	_	_	_	_				
	nce And O% d>: d>: _ _ O: _ max tin	nce Analyzer 0% 10 d>: ait: _0: max time: ar	nce Analyzer 0% 10 20 d>: ait:  _0: max time: _avg time	nce Analyzer 0% 10 20 30 d>: ait: 0: max time: avg time: tota 3.3	nce Analyzer 0% 10 20 30 40 d>:: ait: _0: max time: avg time: total time: 3.310575	nce Analyzer 0% 10 20 30 40 50 d>: ait: 	nce Analyzer 0% 10 20 30 40 50 60 d>: ait: 0: max time: avg time: total time: % co 3.310575 78.6	nce Analyzer 0% 10 20 30 40 50 60 70 d>: ait: 	nce Analyzer 0% 10 20 30 40 50 60 70 80 d>: ait: 	nce Analyzer 0% 10 20 30 40 50 60 70 80 90 d>: d>: ait: 	nce Analyzer

Figure 26. Scenario #2: Performance Analyzer - Main Loop Active

## CONCLUSION

This application note is a starting point in the use of the Keil C51 Compiler and Keil Dscope simulator. The HEX file generated by the compiler can be downloaded directly on the ADuC812 QuickStart<sup>TM</sup> evaluation board using the on-chip serial downloader.

There are many aspects in the Keil toolsuite; this application note illustrated some of them. These tools are a powerful means to develop your ADuC812 applications in high level source code.